

INDEX

Symbols

| | |
|---------------------------------|--------|
| 0-point adjustment | 24, 62 |
| 1 set point | 58 |
| 19" insert, standard unit | 20 |
| 2 separate set points | 58 |
| 2 set points | 58 |
| 2-phase flow | 22 |

A

| | |
|------------------------------|----|
| Adaptor | 41 |
| Add-on modules | 33 |
| Air bubbles | 22 |
| Air generation sources | 75 |
| Air trap | 22 |
| Alarm field | 51 |

B

| | |
|---------------------------|----|
| Back of panel unit | 21 |
| Backward key | 51 |
| Basic settings | 55 |
| Batch compensation | 59 |
| Batch counter | 59 |
| Batch menu | 59 |
| Batch overrun error | 59 |
| Batch quantity | 59 |
| Batch time error | 59 |
| Build-up ordering | 77 |
| Burst pressure | 29 |

C

| | |
|---|----|
| CAN communication | 6 |
| Cavitation | 22 |
| Change key | 51 |
| Change password | 67 |
| Communication standard | 14 |
| Compact polyamid | 20 |
| Converter insert | 43 |
| Correction factor | 61 |
| Correction factor, density offset, fraction offset | 61 |
| Cross-talk | 23 |
| Current output | 57 |
| Current output forced | 65 |
| Current output in passive mode | 50 |

D

| | |
|--|----|
| DEMKO | 30 |
| Density factor | 61 |
| Dialog module | 6 |
| Digital output | 57 |
| Digital signal processor | 6 |
| Dimension-dependent factory setting | 71 |
| Display | 51 |
| Driver circuit | 6 |
| Driver current [mA] | 65 |
| Driver frq. [Hz] | 65 |
| Driver signal | 65 |

E

| | |
|---------------------------------|----|
| Empty pipe limit | 56 |
| Enclosure, burst pressure | 6 |
| Error level | 58 |
| Error level | 56 |

| | |
|--------------------------------------|----|
| Error log | 64 |
| Error number | 58 |
| Error numbers | 73 |
| Error pending | 64 |
| Error system | 64 |
| Ex-area | 30 |
| Ex-compliance of add-on module | 44 |
| External input | 60 |

F

| | |
|---|------------|
| Factory setting | 70 |
| Fatal error | 72 |
| Fit/exchange the SENSORPROM® | 35 |
| Flexible connections | 23 |
| Flow direction | 24, 25, 27 |
| Flow measuring principle | 6 |
| Force output | 60 |
| Forward key | 51 |
| Freeze input | 60 |
| Frequency/pulse output in passive mode | 50 |

G

| | |
|-----------|----|
| Gas | 22 |
|-----------|----|

H

| | |
|---------------------------|----|
| HART® | 14 |
| "Heating jacket" | 18 |
| Hold/continue | 60 |
| Horizontal mounting | 24 |
| Hysteresis | 71 |

I

| | |
|---------------------------------------|----|
| Increased safety "e" | 49 |
| Input circuit | 6 |
| Inside pipe diameter | 6 |
| Intrinsic in- and output cables | 40 |
| Intrinsically-safe | 49 |

J

| | |
|-----------------------|----|
| Jumper position | 50 |
|-----------------------|----|

L

| | |
|------------------------|----|
| Language mode | 67 |
| Limit/direction | 58 |
| Linearity error | 11 |
| Liquid pressure | 6 |
| Lock/unlock key | 51 |
| Low flow | 24 |
| Low-flow cut-off | 56 |

M

| | |
|------------------------------------|----|
| Mass flow measuring range | 6 |
| Materials | 6 |
| Max. batch time | 59 |
| Max. frequency | 70 |
| Max. operating pressure (PN) | 29 |
| Max. zero point error | 11 |
| Mechanical vibration | 23 |
| Menu structure | 52 |
| Multiple plug | 41 |

N

Noise filter 56
 Numerical values 55

O

Operating time 65
 Operator menu 52
 Operator menu setup 66
 Ordering procedure 76
 Output mode 70
 Output module 6

P

Panel front unit 21 TE 21
 Password 52
 Permanent errors 72
 Pick-up 1/2 amplitude 65
 Pipe wall thickness 6
 Positioning of the decimal point 55
 Primary field for numerical value 51
 Process connections 6
 Product identity 67
 Profibus device profile 14
 Pulse polarity 70
 Pulse width 70

R

Re-initialized 64
 Reference conditions 11
 Repeatability error 11
 Reset mode 62
 Reset totalizer 60
 Resonant frequency 6

S

Select key 51
 Selecting the unit 55
 Sensor frequency 65
 Sensor temperature 65
 SENSORPROM® flow memory unit .. 5
 Service mode 65
 Setting the 0-point 62
 Setup menu 52
 Setup mode 52
 Sigma limit 62
 Sign field 51
 Spare parts 78
 Special information 65
 Start batch 60
 Static back pressure 22
 Stop batch 60

T

Temperature class 30
 Time constant 70
 Top up key 51
 Totalizer 56
 Transmitter Ex-d 21
 Transportation/storage 23
 Turning the control pad 32
 Turning the transmitter 32

U

Unit field 51
 User code 52

V

Vertical mounting 25
 View mode 52


W

Wall mounting box 21 TE 20
 Warning 72

Z

Zero adjust 60, 62
 Zero adjust time 62
 Zero sigma 62

The FCI Instrumentation range contains:

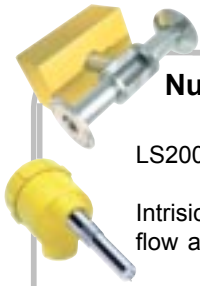

NuTec™ Series

LS2000, FS2000 & FS2000L

Intrinsically safe or non-intrusive flow and level switches.



VORTAB

VMR, VIS & VFK

Flow Conditioners that eliminate flow distortions that degrade instrument performance.



FLT™ Series

FLT93


The flow, level and temperature switches with analog outputs and FlexSwitch technology.



MT Series

MT86 & MT91


Multipoint mass flowmeters for gas or air service and CEMS stack monitoring.

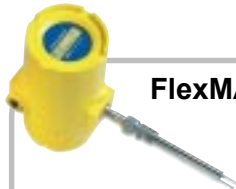

FlexMASter™ Series

ST95, ST96 & ST98.

The high performance thermal mass flowmeter for gas applications.

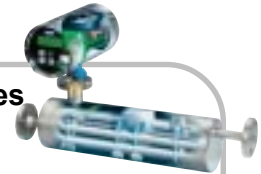

FlexCOR™ Series

CMF

Coriolis mass flowmeters for all liquid applications.

© Copyright 2000
Fluid Components Intl
a limited liability company
All Rights Reserved

Notice of Proprietary Rights

This document contains confidential technical data, including trade secrets and proprietary information which are the property of Fluid Components Intl (FCI). Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without the prior written consent of FCI.

Visit FCI on the Worldwide Web: www.fluidcomponents.com

1755 La Costa Meadows Drive, San Marcos, California 92069 USA - 760-744-6950 - 800-854-1993 - Fax 760-736-6250

European Office: Persephonestraat 3-01 5047 TTTilburg - The Netherlands - Phone 31-13-5159989 - Fax 31-13-5799036