

# INSTALLATION, OPERATION AND MAINTENANCE MANUAL

## Model MT91 Multipoint Flowmeter

*Software Version 1.1xx  
Doc. No. 003185 Rev. B*

I

---

### **Notice of Proprietary Rights**

---

This document contains confidential technical data, including trade secrets and proprietary information which are the property of Fluid Components Intl (FCI).

Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without the prior written consent of FCI.

---

**© Copyright 1997 Fluid Components Intl  
a limited liability company  
All Rights Reserved**



## CUSTOMER COMMITMENT PLEDGE

We will work closely with our customers to provide the best products and service

- at a competitive value
- on time
- with unquestioned support

in full compliance with our *COMPLETE CUSTOMER COMMITMENT*.

## COMMITMENT TO QUALITY

In keeping with the overall commitment of management and employees of Fluid Components Intl to Total Quality Management, the Technical Publications Department expresses its pledge and mission to you, our customer:

*“To support the creation and publication of world-class technical material which is technically accurate and practical, concise and user-friendly, attractive and professional in appearance, and consistent in form, format, content, and style.”*

## QUALITY IMPROVEMENT

We appreciate your comments and suggestions which support our effort to constantly improve our product and services. Please address comments and suggestions to your nearest field representative or in-house technical support representative. Thank you.

FCI Technical Publications Department

## CUSTOMER SERVICE/TECHNICAL SUPPORT

FCI provides full in-house technical support for our products 8 a.m. to 5 p.m. PST, Monday through Friday (excluding holidays and an annual plant closure between Christmas and New Year's day). Also, additional technical representation is provided by FCI field representatives. Before contacting one of our field or in-house representatives, please ensure that you have performed the troubleshooting techniques outlined in this document.

### ***By Mail***

Fluid Components Intl  
1755 La Costa Meadows Dr.  
San Marcos, CA 92069  
Attn: Customer Service Department

### ***By Phone***

Contact the FCI regional representative in your area. If you are unable to contact the field representative or are unable to satisfactorily resolve the situation, contact the FCI Customer Service Department at 1 (800) 854-1993.

### ***By Fax***

To describe your problems in a more graphical or pictorial manner, send your fax including your phone or fax number to your regional representative. Again FCI is available through facsimile if you have exhausted your possibilities with the authorized factory representative. Our fax number is (760) 736-6250; it is available 7 days a week, 24 hours a day.

### ***International support***

For product information or product support outside the contiguous United States, Alaska, or Hawaii, contact your country's FCI International Representative or the one nearest to you. See list on following pages.

Appendix C contains a detailed explanation of the FCI customer service policy on returns, adjustments, in-field or factory repair, in- or out-of-warranty.

Reserved for Domestic Rep Map

Reserved for International Rep Map

# REVISIONS

<b>REV.</b>	<b>DESCRIPTION</b>	<b>DATE</b>	<b>AUTHOR</b>
B	Incorporated Errata 17EN000020 into the manual. Changed Appendix C. See change bars for all other changes.	03/17/97	R. Sanders





# Contents

## Chapter 1 - General Information

Description .....	1-1
Flow Element .....	1-1
Flow Transmitter .....	1-1
Theory of Operation .....	1-2
Specifications .....	1-2

## Chapter 2 - Installation

Receiving/Inspection .....	2-1
Packing/Shipping>Returns .....	2-1
Factory Calibration Note .....	2-1
Pre-Installation Procedure .....	2-1
Verify Serial Numbers .....	2-1
Prepare or Verify Flow Element Location .....	2-1
Verify Dimensions .....	2-2
Verify Flow Direction for Flow Element Orientation and Placement .....	2-2
Install Flow Element .....	2-2
Threaded Mounting .....	2-2
Flanged Mounting .....	2-3
Install Flow Transmitter .....	2-3
Minimum Wire Size .....	2-3
Remote Hardware .....	2-3
Power Connection Information .....	2-4
NEMA 4 Remote Enclosure .....	2-4
Rackmount Remote Enclosure .....	2-4
Sensing Point Connections .....	2-4
NEMA 4 Remote Enclosure .....	2-4
Rackmount Remote Enclosure .....	2-4
Customer Connections .....	2-7
Analog Output Board - Assy #015231 .....	2-7
Jumper J2 .....	2-7
Jumper J3 .....	2-7
Connector J4 .....	2-7
Relay Output Board - Assy #015235 .....	2-8
Connector J1 .....	2-8
Connector J2 .....	2-8
Connector J3 .....	2-8
Serial Communication Ports - Backplane Board Assy #015206 .....	2-9
Connector J17 - EIA-232 .....	2-9
Connector J23 - 4-20mA .....	2-9
Connector J24 - EIA-422/EIA-485 .....	2-9
Installation Quick Check List .....	2-10

## Chapter 3 - Operation

Introduction .....	3-1
Start Up .....	3-1
Using the MT91 Software with Display .....	3-1
Display .....	3-1
Menu Window .....	3-1
Other Window Types .....	3-2
Menu Control .....	3-2
Menu Organization .....	3-2
Quick Custom Setup .....	3-4
In-Depth Custom Setup Procedure .....	3-6
Password Protection .....	3-6
Factory Level .....	3-6
User Level .....	3-6

Selecting Units of Measure .....	3-7
Selecting the Normal Display Screen .....	3-8
Assigning Sensing Points to Outputs .....	3-8
Setting Analog Outputs .....	3-9
Setting Discrete Outputs .....	3-10
Daily Calibration Testing .....	3-12
Advanced Features .....	3-13
Flow Rate Correction Equation .....	3-13
Offset Adjustment of Sensing Points .....	3-14
Applying the Filter .....	3-15
Serial Communications .....	3-16
<b>Chapter 4 - Maintenance</b>	
Maintenance .....	4-1
Calibration .....	4-1
Electrical Connections .....	4-1
Transmitter Enclosure .....	4-1
Electrical Wiring .....	4-1
Flow Element Connections .....	4-1
Flow Element Assembly .....	4-1
<b>Chapter 5 - Troubleshooting</b>	
Quick Check .....	5-1
Non-maintenance Observations .....	5-1
Check Serial Numbers .....	5-1
Check Input Power .....	5-1
Check the Unit Installation .....	5-1
Check for Moisture .....	5-1
Check Application Design Requirements .....	5-2
Verify Standard vs. Actual Process Conditions .....	5-2
Troubleshooting Process .....	5-2
Verify Units .....	5-2
Verify Channel Assignment .....	5-2
Verify Limits .....	5-3
Check for Suspect Sensing Points and Heaters .....	5-3
Verify the Calibration Parameters .....	5-3
Check the Resistance of the Sensing Points .....	5-4
Check the Analog Outputs .....	5-5
Check the Relays .....	5-5
Run the Calibration Test .....	5-5
Spares .....	5-6
Defective Parts .....	5-6
Customer Service .....	5-6
<b>Appendix A - Drawings</b>	
Outline Drawings .....	A-1
<b>Appendix B - Glossary</b>	
Abbreviations and Explanation of Terms .....	B-1
<b>Appendix C - Customer Service</b>	
Policy and Procedures .....	C-1
<b>Appendix D - MT91 Delta R Parameters</b>	
Explanation of and Fill-Out Sheets for Delta R Parameters .....	D-1
<b>Appendix E - CE Conformance</b>	
CE Mark Conformance Information .....	E-1

## Figures

1-1	Flow Element Cutaway View of One Sensing Point .....	1-1
1-2	Functional Block Diagram .....	1-1
2-1	Flow Element Showing Flat Area .....	2-2
2-2	MT91 Wiring Diagram .....	2-5
2-3	Flow Transmitter Outline for NEMA 4 and Rackmount Remote Enclosures .....	2-6
2-4	Wiring Diagram for Serial Connector EIA-232 .....	2-9
2-5	Wiring Diagram for Serial Connectors EIA-422 & EIA-485 .....	2-10
3-1	Menu Window .....	3-1
3-2	Keypad Layout .....	3-2
3-3	Menu Flowchart .....	3-3
3-4	Normal Display Screen 1 and Screen 2 .....	3-8
3-5	Assign Heads Display .....	3-9
3-6	Analog Output .....	3-9
3-7	Relay Switch Points Schemes .....	3-11
3-8	Calibration Test Display Screens .....	3-12
3-9	Desired Flow Rate vs. Measured Flow Rate .....	3-14
3-10	Delta-R vs. Flow Rate .....	3-15
3-11	Effects of Filter on Flow Signal vs. Time .....	3-15
5-1	J1 Connector Plug on the Backplane Board .....	5-4
5-2	TB1-HD1 Terminal Connector .....	5-5
A-1	Flow Element Installation Drawing .....	A-1
A-2	Local Enclosures .....	A-2
A-3	NEMA 4 Remote Enclosure .....	A-2
A-4	Rackmount Remote Enclosure .....	A-3
A-5	Recommended Customer Process Connection and End Support Configuration .....	A-4
A-6	Alternate End Support Configuration .....	A-5

## Tables

2-1	Interconnecting Cable Size (AWG) .....	2-3
2-2	Connector J4 Signal Information .....	2-7
2-3	Connector J2 and J3 Signal Information .....	2-8
3-1	Key Functions .....	3-2
3-2	Units of Measure and Abbreviations .....	3-7
3-3	Relay Assignments by Parameters .....	3-10
3-4	Commands and Responses for Protocol .....	3-17
5-1	Quick Check Troubleshooting .....	5-1
5-2	Resistances at J1 Connector Plug on the Backplane Board .....	5-4
5-3	Resistances at TB1-HD1 Terminal Connector .....	5-5

# Symbols

The following symbols are used throughout the manual to draw your attention to items or procedures that require special notice or care.



**Warning:** Warns of possible **personal danger** to those handling the equipment.



**Caution:** Cautions against possible **equipment damage**.



**Note:** Contains important information.